

# **BRILSOL**



U S E R M A N U A L  
(POST MOULD)

# STEP 01

## Clean the Surface:

Thoroughly wipe the area of the plastic article where the graphics will be applied. Ensure no dust, dirt, oil, silicon grease, or any other particles are present.



## STEP 02 Heat the Surface:

Gently heat the surface to a temperature between 60°C and 80°C. This ensures a hassle-free and secure graphic transfer.



# STEP 03

## Position The Graphics :

Position the graphic on the desired area of the moulded article.



## STEP 04 Apply Pressure:

Use a rubber hand roller to apply minimal pressure over the graphic. Gently roll the roller over the graphic 3 to 4 times.



# STEP 05

## Removing the Tape:

Carefully peel off the protective film over the graphic.




STEP

06

Heat the Surface Again:

Gently heat the surface with the graphic once more to ensure the graphic diffuses completely into the plastic.

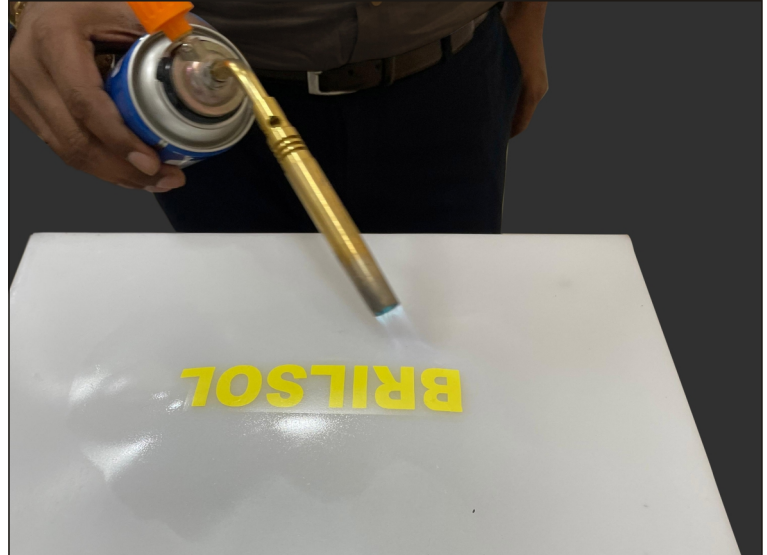

# STEP 07

## Complete the Process:

The graphics will automatically transfer to the plastic product.





## Important Note:

- To prevent smudging, avoid touching the area with the graphics for at least 30 minutes after the transfer.

These guidelines are intended to help you execute the procedure delicately. However, hands-on experience will deliver desired results with ease and perfection. If you have any doubts or queries, we are pleased to assist you.

